

New Trimming Head Coming Soon


Re-Filling Nylon Line Trimmer Head

1



Rotate the blue centre piece to align the arrow mark with the holes.

2

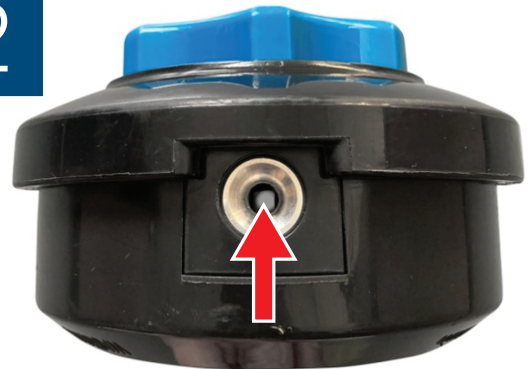

Check that the two holes are aligned.

3



Pass the nylon rope through the two holes until you have 2m each side.

4



Use 4m of 2.4mm nylon trimmer line.

5



Turn the blue centre piece clockwise until there is 20cm of line remaining.

Need Help?

Phone

01646 687 880

Email

sales@hyundaipowerproducts.co.uk

Online Live Chat

www.hyundaipowerproducts.co.uk